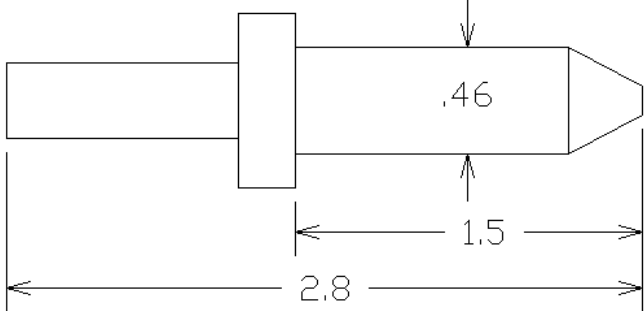 
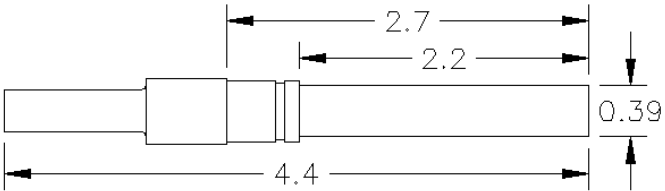 
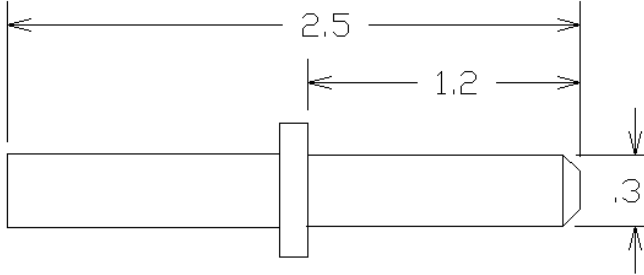 
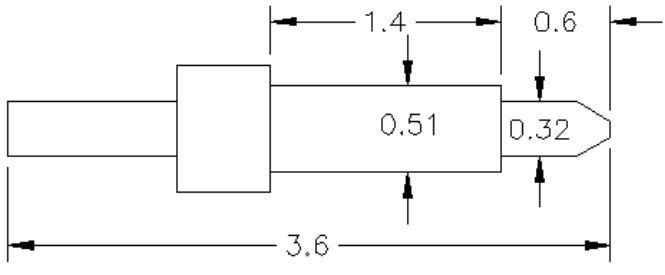 
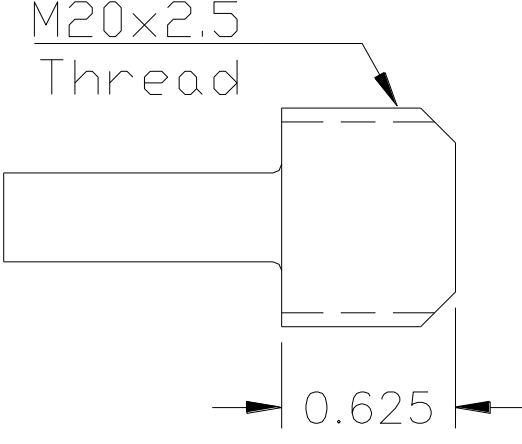 
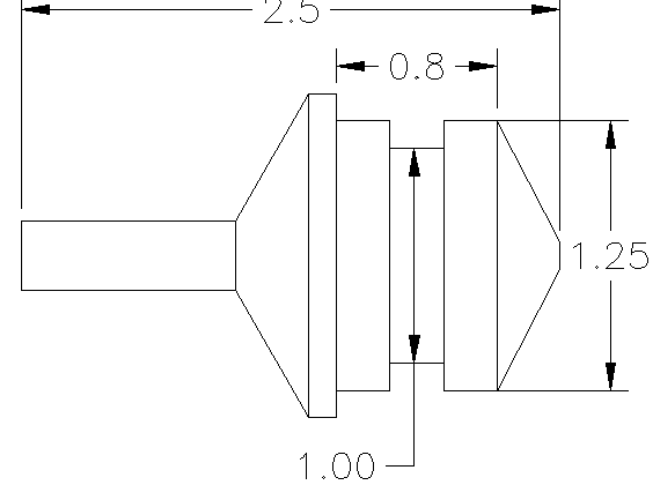 
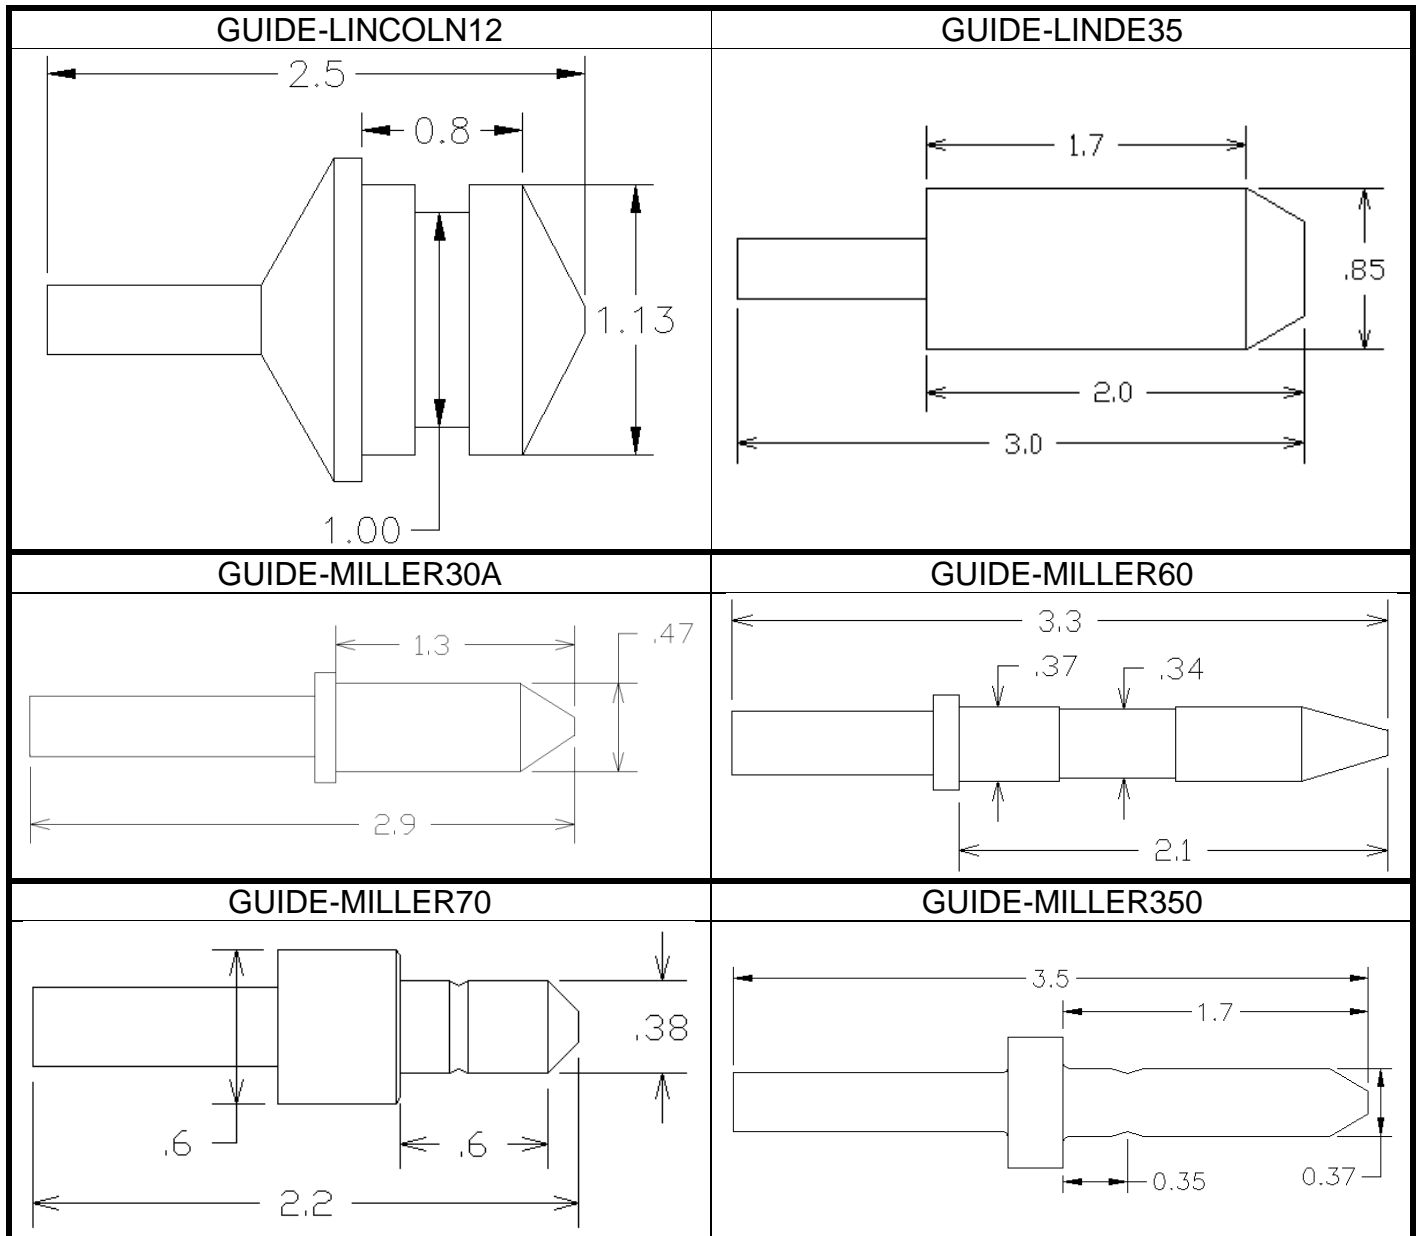 








**Dimensions in Inches**

|   |  |
|---|--|
| <p><b>GUIDE-ARISTOROBOT</b></p>    | <p><b>GUIDE-BINZEL</b></p>     |
| <p><b>GUIDE-COBRA</b></p>         | <p><b>GUIDE-FRONIUS</b></p>   |
| <p><b>GUIDE-FRONIUS2015</b></p>  | <p><b>GUIDE-LINCOLN</b></p>  |


**Dimensions in Inches**



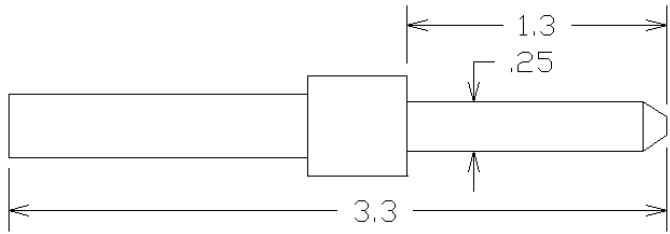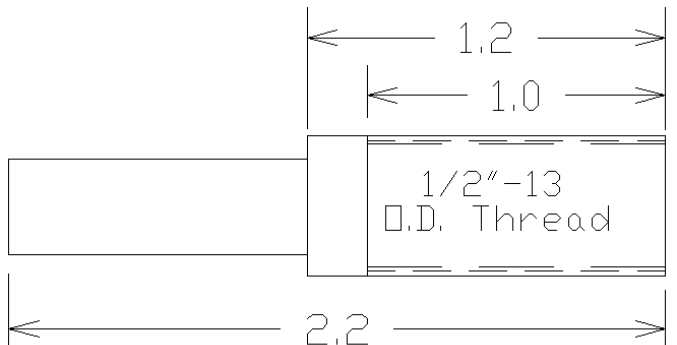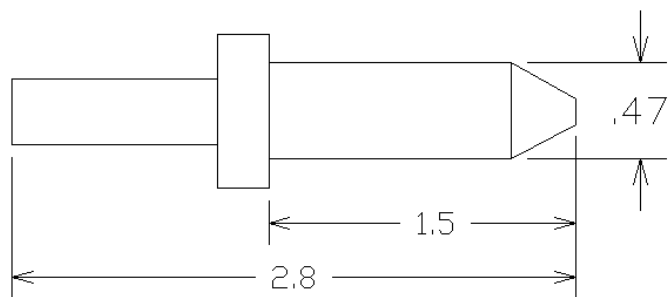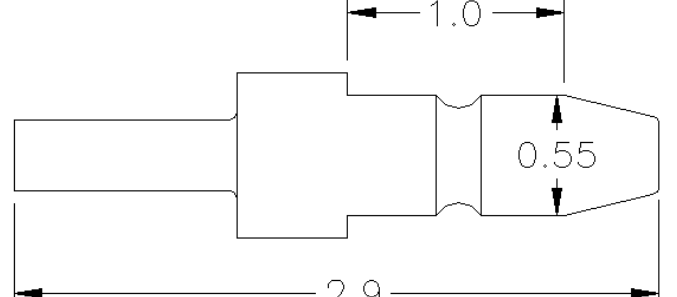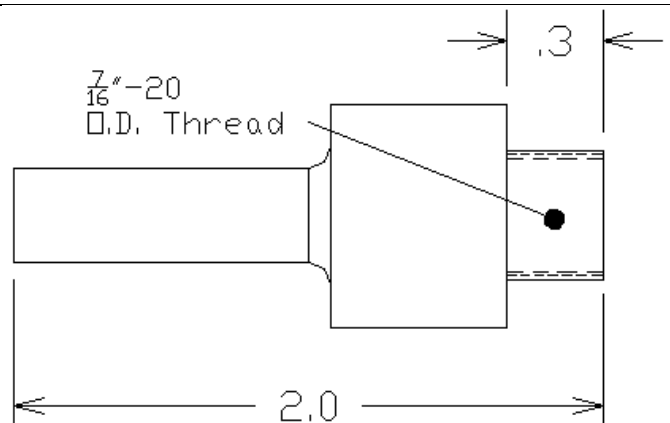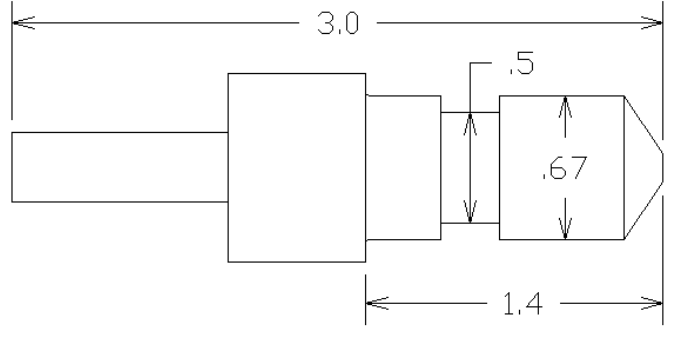      **Dimensions in Inches**


|  |   |
|--|---|
| <p><b>GUIDE-MILLERXR</b></p>          | <p><b>GUIDE-MOTOMAN</b></p>     |
| <p><b>GUIDE-OTC</b></p>              | <p><b>GUIDE-OTC12</b></p>      |
| <p><b>GUIDE-OTCSTRAIGHTNER</b></p>  | <p><b>GUIDE-PANAROBO</b></p>  |

### Dimensions in Inches






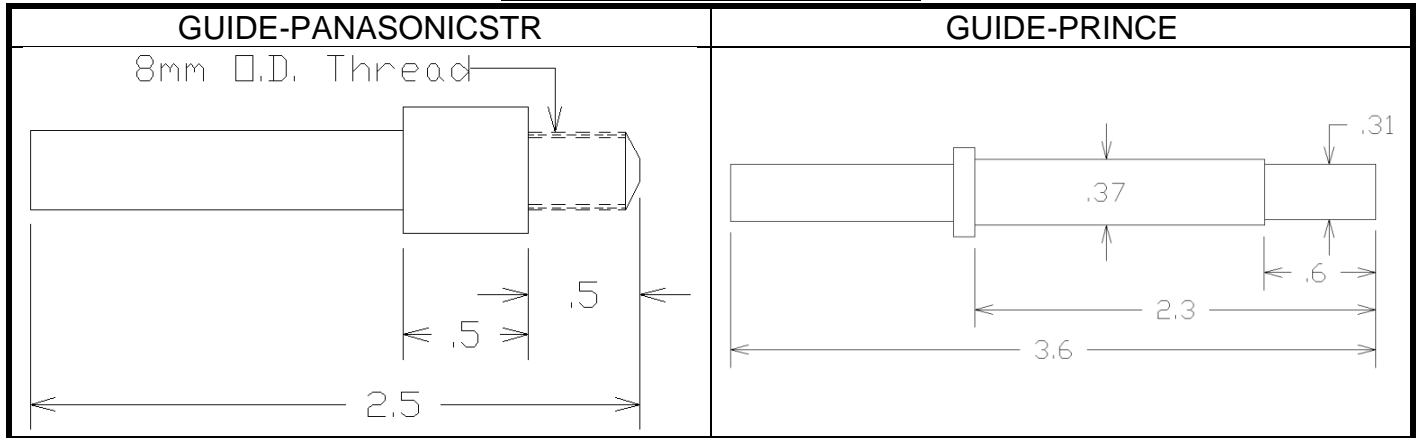 


#### NOTES:

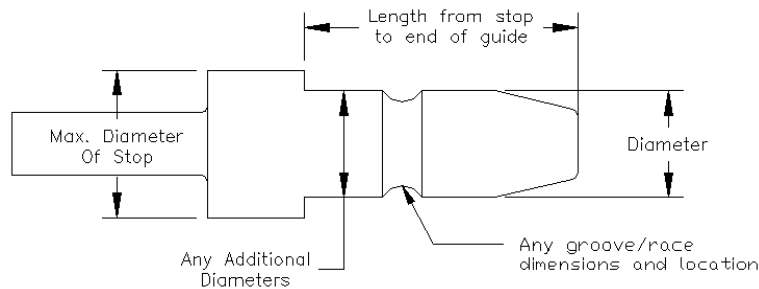 
- 1) GUIDE-ARISTO is no longer an available part. You can either use the AristoRobot guide or simply run the conduit into the back of the drive stand on the ESAB feeders.
- 2) Please note that the Lincoln12 is only 1/8" smaller in diameter. You can simply modify one of the old Lincolns in a pinch.
- 3) Please provide detailed dimensions if a new guide is needed. Required dimensions are:









**Dimensions in Millimeters**
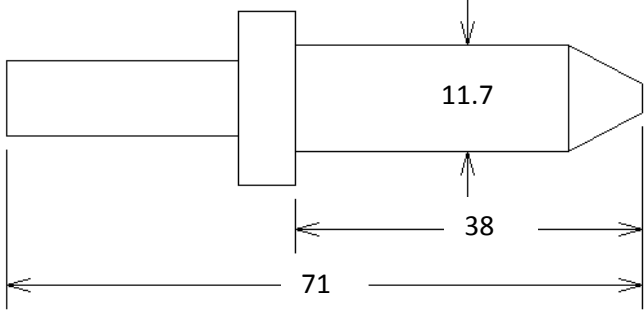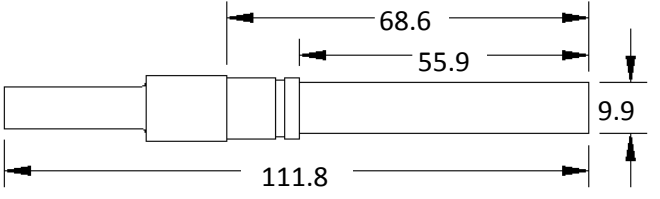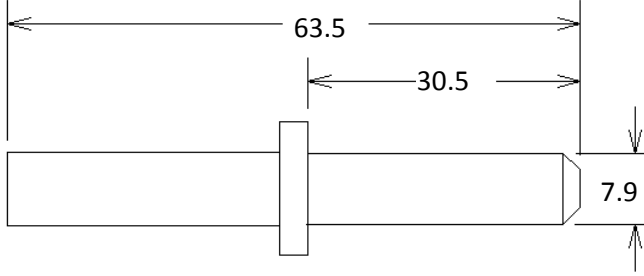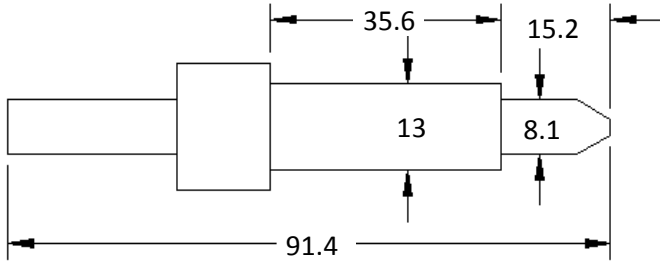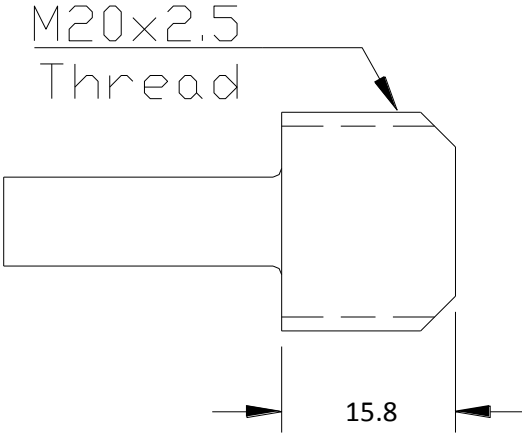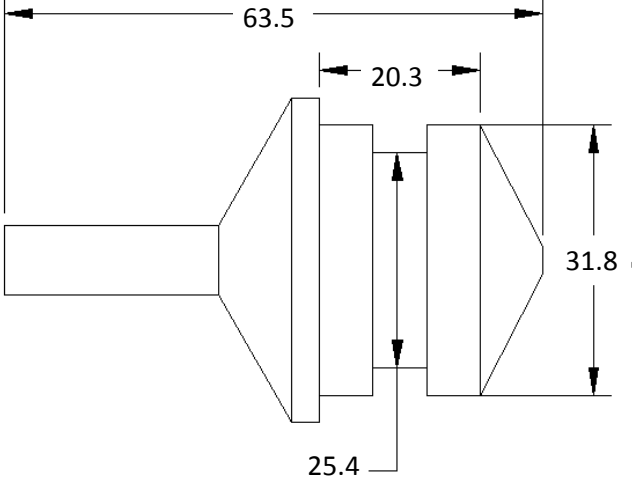      
|   |  |
|---|--|
| <p style="text-align: center;"><b>GUIDE-ARISTOROBOT</b></p>                              | <p style="text-align: center;"><b>GUIDE-BINZEL</b></p>     |
| <p style="text-align: center;"><b>GUIDE-COBRA</b></p>                                   | <p style="text-align: center;"><b>GUIDE-FRONIUS</b></p>   |
| <p style="text-align: center;"><b>GUIDE-FRONIUS2015</b></p>  <p>M20x2.5<br/>Thread</p> | <p style="text-align: center;"><b>GUIDE-LINCOLN</b></p>  |


**Dimensions in Millimeters**

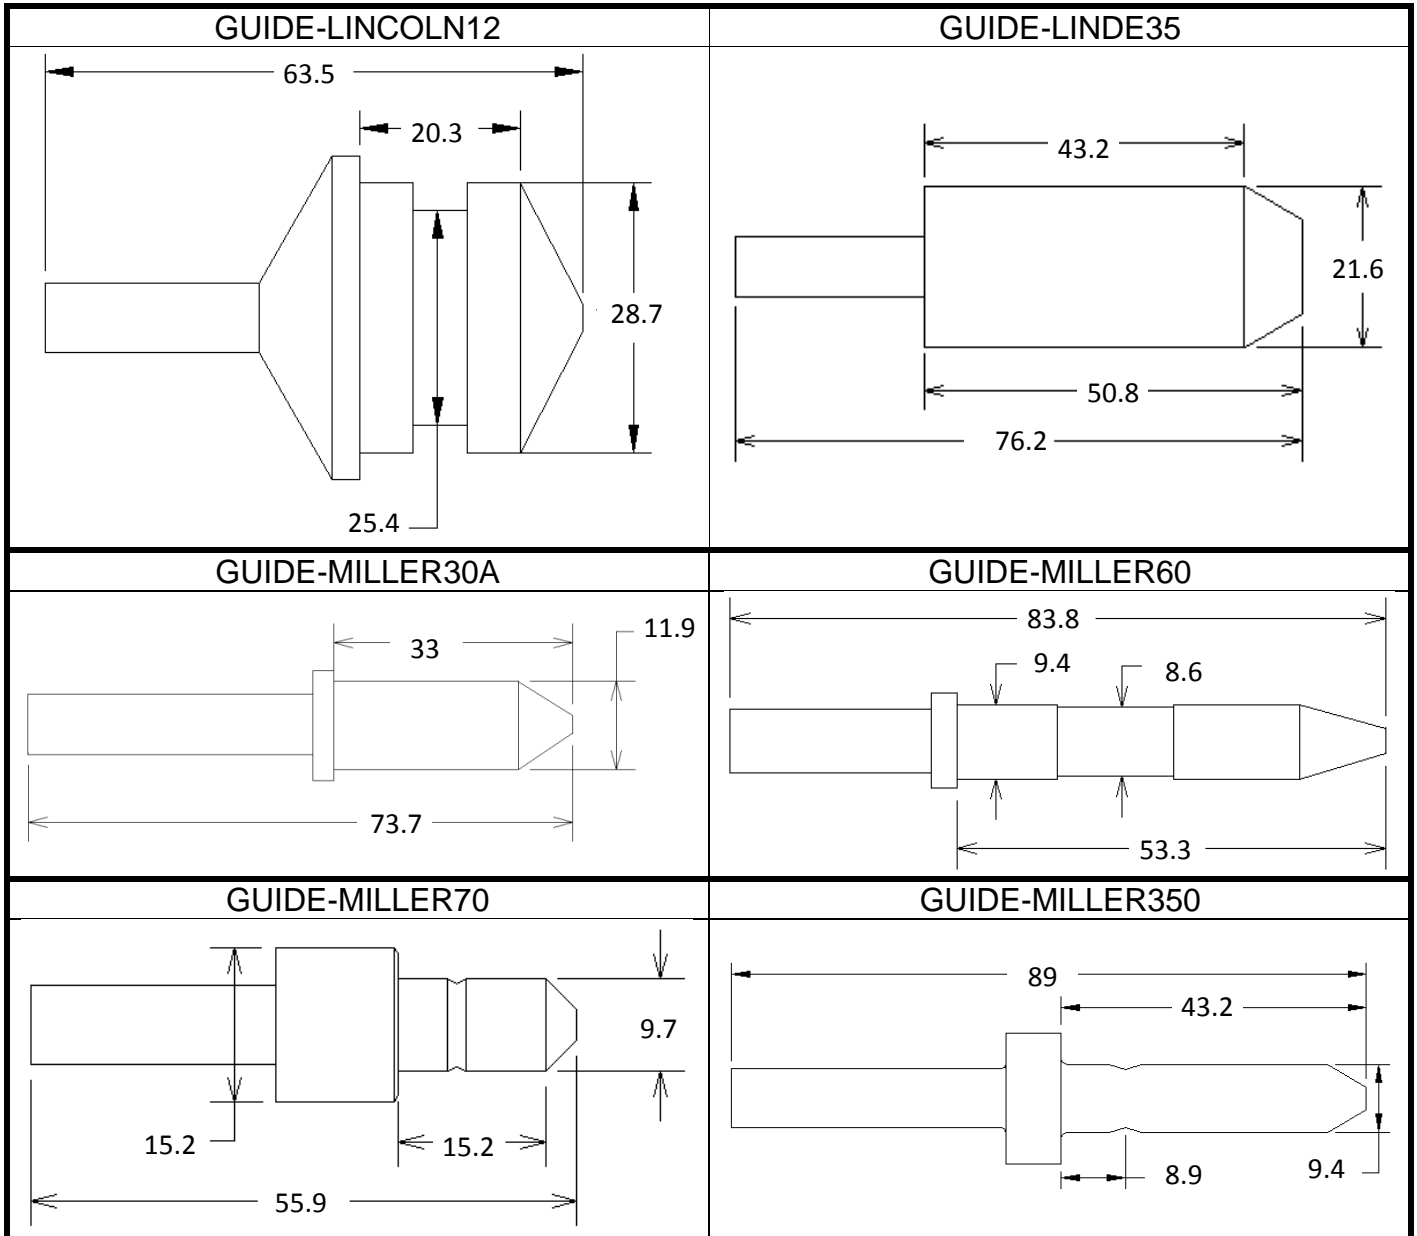 

**Dimensions in Millimeters**
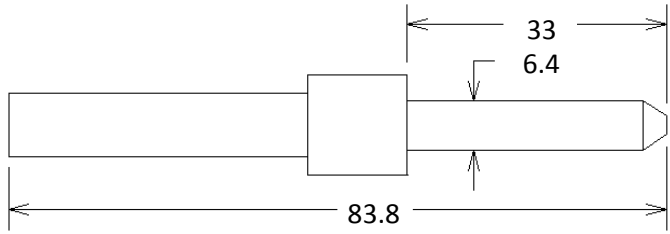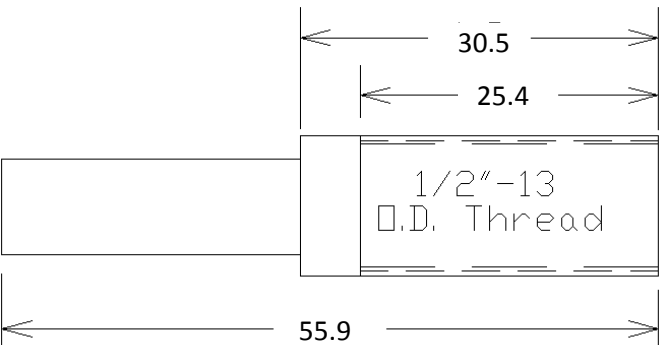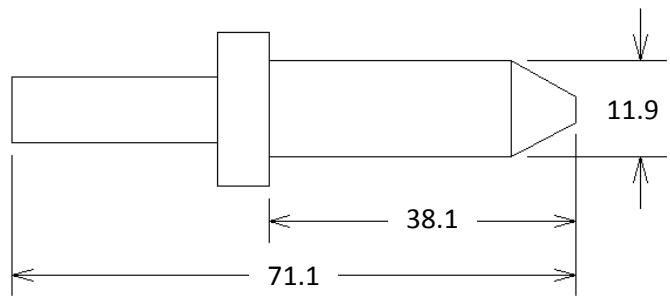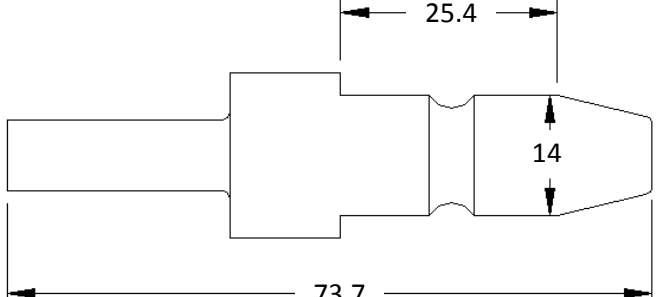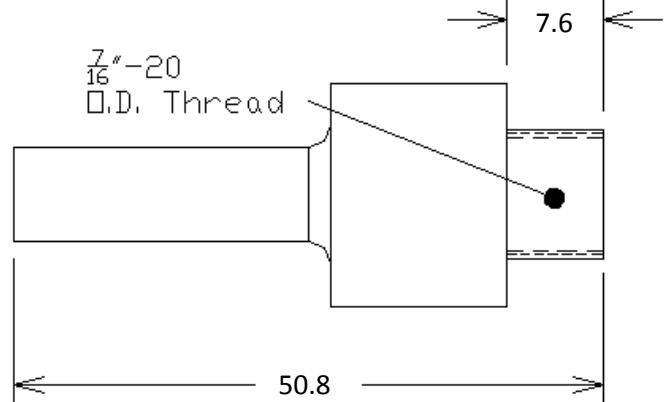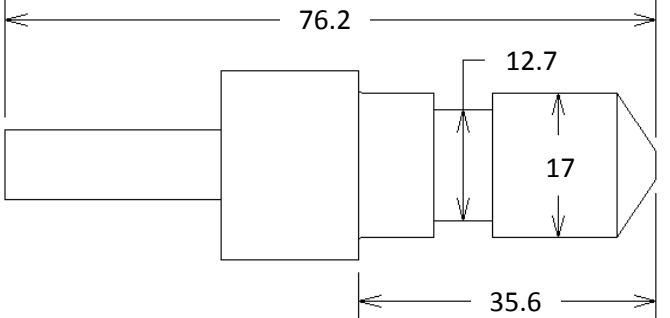      
|  |   |
|--|---|
| <p style="text-align: center;"><b>GUIDE-MILLERXR</b></p>          | <p style="text-align: center;"><b>GUIDE-MOTOMAN</b></p>     |
| <p style="text-align: center;"><b>GUIDE-OTC</b></p>              | <p style="text-align: center;"><b>GUIDE-OTC12</b></p>      |
| <p style="text-align: center;"><b>GUIDE-OTCSTRAIGHTNER</b></p>  | <p style="text-align: center;"><b>GUIDE-PANAROBO</b></p>  |

**Dimensions in Millimeters**

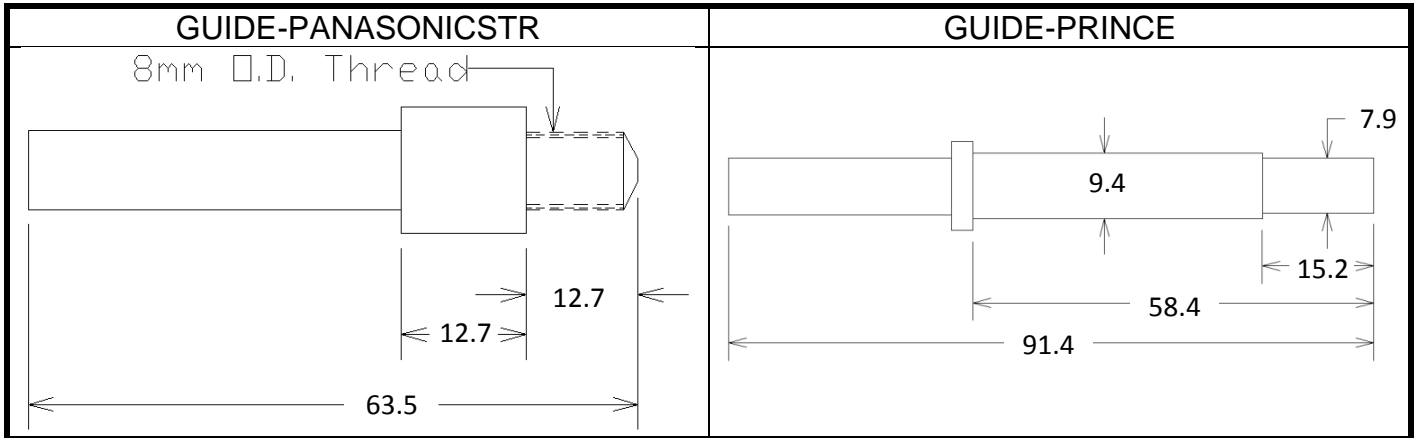 

**NOTES:**

- 1) GUIDE-ARISTO is no longer an available part. You can either use the AristoRobot guide or simply run the conduit into the back of the drive stand on the ESAB feeders.
- 2) Please note that the Lincoln12 is only 1/8" (3 mm) smaller in diameter. You can simply modify one of the old Lincolns if necessary.
- 3) Please provide detailed dimensions if a new guide is needed. Required dimensions are:

